PRECIOSA


Iron-on application

APPLICATION MANUAL

We are pleased that you are going to brighten up your look with a crystal transfer, which is made of Preciosa cut crystal stones (rhinestones). Please follow the application and care instructions described below.



1 Prepare a fabric resistant to ironing up to 200 °C (cotton, denim). You will also need an iron (preferably use the one without steam holes, a steam iron can also be used), baking paper and hard mat (cardboard, table, ironing board).






3 Cut out the motif. Leave approx. 3 mm of foil from outer crystals.




• Remove the application from the white paper. You will no longer need the white paper.

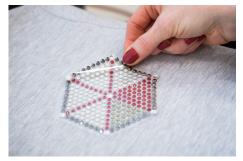

⑤ Place the transfer onto the fabric where you want it to be applied (stones facing up, silicone side up).




6 Place ironing paper (or a layer of cotton cloth) on the transfer. Put on the iron and iron it. Just attach the iron on the application in the first few seconds. Then slowly and gently drive over after the application.

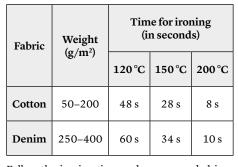

Follow the ironing time and recommended iron temperatures given in the table. We recommend the ideal temperature for ironing 150 °C.



② Allow to cool for a few seconds. The glue should cure for 24 hours to become firm and durable. Do not handle or wash the textile material during this period.

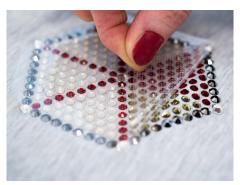

3 Gently remove the transparent foil. If any crystal stones (rhinestones) are loose, cover the motif with the transparent film and a cotton fabric and repeat the procedure again (always with respect to the fabric)



9 Textile material with applied stones can be washed at 60 °C, tumble-dried, dry-cleaned and carefully ironed. We recommend turning the clothes upside down and using gentle wash mode.